

Aegis Fortress

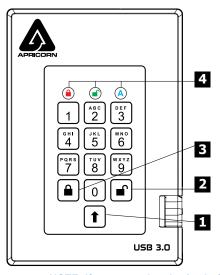

Quick Start Guide

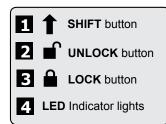

When you first plug in the Aegis Fortress, the unit will do a self-test to verify all security components are working properly. The LEDs will go through 3 test stages: RED, GREEN, and BLUE. This will be followed by three GREEN blinks indicating all components are functioning properly. A test failure will leave the unit in an inoperable state indicated by a blinking **RED** LED.

NOTE: if you are using the Aegis Configurator (sold separately) to set up your Aegis Fortress, First ensure that the device to be configured has the "configurable" long on the helly label. Also, DO NOT perform the following "configurable" logo on the belly label. Also, DO NOT perform the following Manual Admin and USER PIN SETUP steps below; The Aegis Configurator will only recognize devices in their factory "out of box" state or devices that have been completely reset.

First Time Use

Before the Fortress can be used, the Admin PIN MUST be set. The LEDs will glow Solid BLUE and Solid GREEN to indicate the Fortress is waiting for an Admin PIN to be set.

To Set-up the Admin PIN:

- Press + 9 simultaneously. The LEDs will be Constant BLUE / Blinking GREEN.
- off, the GREEN LED will blink three times, and then will return to Solid BLUE and Blinking GREEN.
- glow solidly for three seconds.
- 4. The BLUE LED will glow solidly indicating the drive is in Admin mode and will remain that way for 30 seconds or until the key is pressed, either of which will return the drive to its standby (locked) state.
- 5. The Admin PIN is now set and will allow access to the drive or the Admin features.
- To access the drive's data using the Admin PIN, press the button, then enter the new Admin PIN and press ■.

PINs must be a minimum length of 7 maximum 16 digits. Cannot contain all consecutive numbers (2345678 or 9876543) Cannot contain all same number (1111111) The SHIFT key can be used for additional combinations.

SHIFT + 1 are a separate value than just 1.

Locking the Drive

To lock the drive, press the \triangle button.

If data is still being written to the drive, the Fortress will wait until all data has been written to the drive and then it will lock automatically.

Note: The Aegis Fortress will not be recognized by the operating system in its standby state.

Unlocking the Drive

To unlock the drive, enter either a User PIN or Admin PIN and press the

■ button.

Adding a new User PIN

- LED flashes GREEN three times, then returns to Solid BLUE and Blinking GREEN.
- Re-enter the new User PIN and press

 ■. If the LED stays solid GREEN for two seconds and then solid **BLUE**, the User PIN was successfully added.

Formatting For Mac OS

The Aegis Fortress comes preformatted in NTFS for Windows®.

For the Mac OS, you must first reformat the drive to a Mac compatible file system.

Once drive is unlocked and inserted into a USB port, open the

Mac Disk Utility from Applications/Utilities/Disk Utilities and perform the following:

- 1. Select the Aegis Fortress from the list of drives and volumes.
- Click the 'Erase' tab.
- 3. Enter a name for the drive. The default name is Untitled. The drive's name will eventually appear on the desktop.
- 4. Select a volume format to use. The Volume Format dropdown menu lists the available drive formats that the Mac supports. The recommended format type is 'Mac OS Extended (Journaled).'
- 5. Click the 'Erase' button. Disk Utility will unmount the volume from the desktop, erase it, and then remount it on the desktop.

For the complete Aegis Fortress manual including detailed formatting instructions, https://www.apricorn.com/media/document/file/AegisFortress Manual.pdf

Technical Support

Apricorn provides the following helpful resources:

- 1. Apricorn's Website (http://www.apricorn.com)
- 2. E-mail us at support@apricorn.com
- 3. Call Technical Support at 1-800-458-5448 from 8:00 a.m. to 5:00 p.m. PST, M - F